


REPLACEMENT PARTS - MODEL RM2520 2-CYCLE TRIMMER

PPN 41CDZ20C983

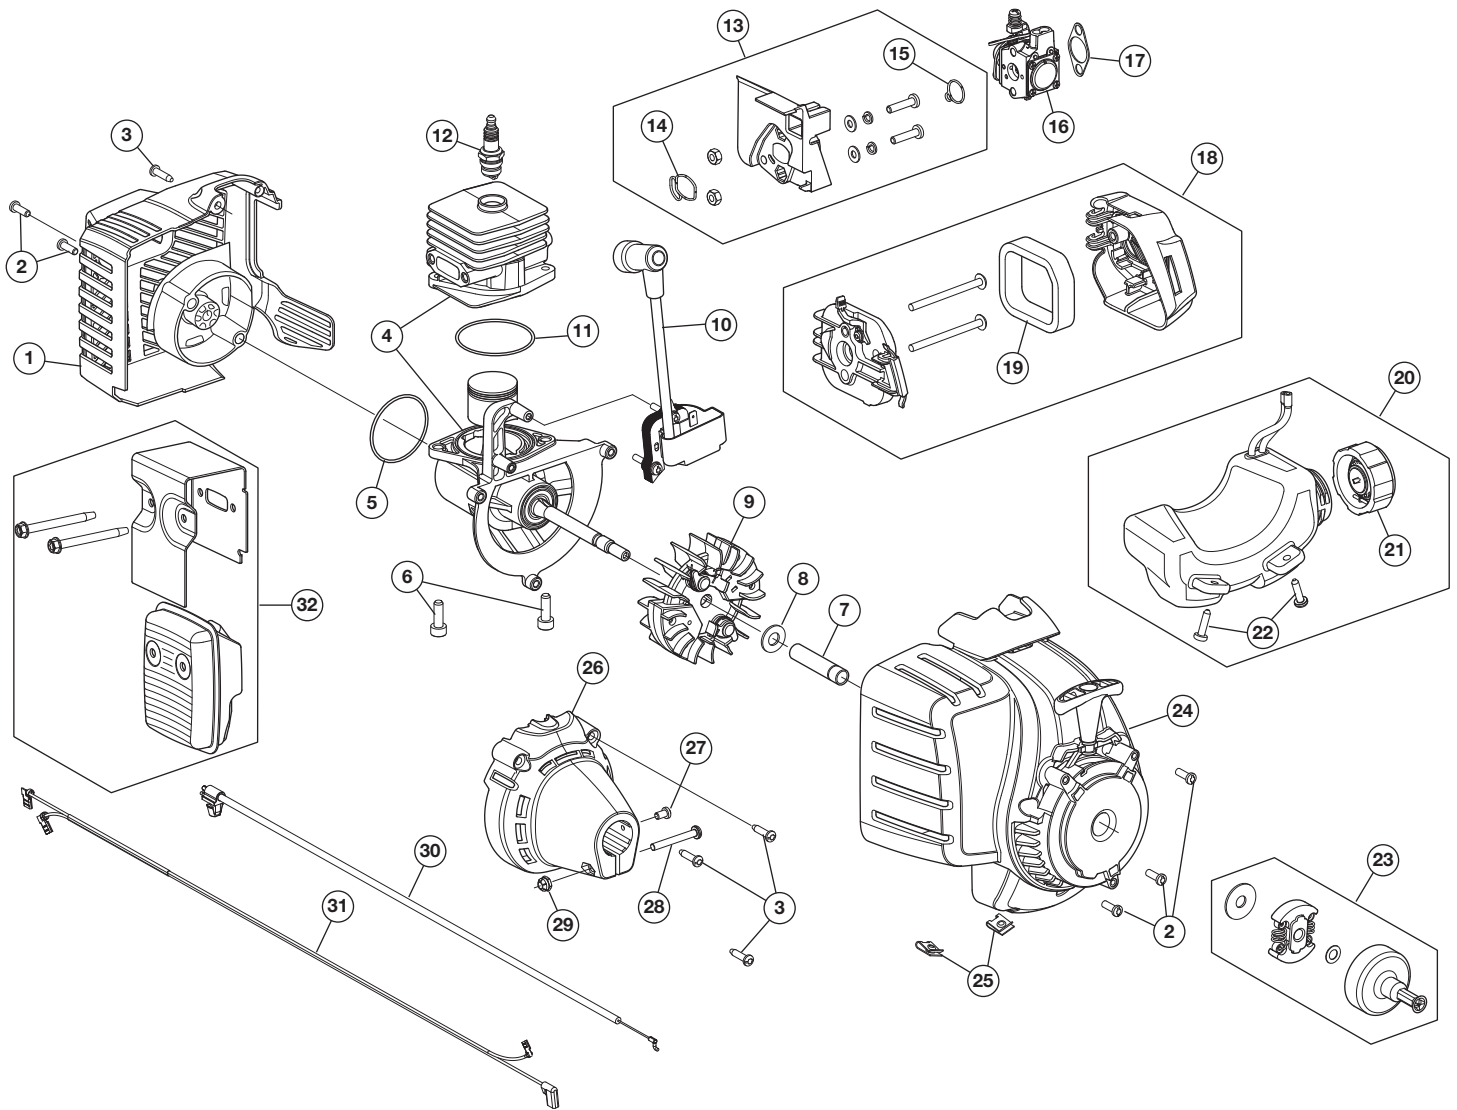

Item	Part No.	Description
1	753-06194	Rear Cover Assembly (includes 2 & 3)
2	791-181345	Cover Screw
3	791-181862	Housing Screw
4	753-06922	Short Block Assembly (includes 5 - 12)
5	753-06174	O-Ring
6	791-182723	Crankcase Bolt
7	753-06218	Spacer
8	753-06247	Washer
9	753-06175	Flywheel Assembly
10	753-06763	Module Assembly
11	753-06275	Crankcase O-Ring
12	753-06847	Spark Plug
13	753-06189	Insulator Assembly (includes 14 & 15)
14	753-06184	Insulator O-Ring
15	753-06185	Carburetor O-Ring
16	753-06190	Carburetor

Item	Part No.	Description
17	753-06253	Air Cleaner Gasket
18	753-06415	Aircleaner Cover Assembly (includes 19)
19	753-06417	Aircleaner Filter
20	753-06921	Fuel Tank Assembly (includes 21 & 22)
21	791-181930	Fuel Tank Screw
22	791-182612	Fuel Tank Cap
23	753-05860	Clutch Assembly
24	753-06943	Starter Housing (includes 3 & 25)
25	791-182366	U-shaped Nut
26	753-06181	Clutch Cover (includes 2)
27	791-182519	Anti-rotation Screw
28	753-04003	Clamp Screw
29	712-0161	Clamp Nut
30	753-06188	Throttle Cable
31	753-06187	Lead Wires
32	753-06418	Muffler Assembly

REPLACEMENT PARTS - MODEL RM2520

2-CYCLE TRIMMER

PPN 41CDZ20C983

Item	Part No.	Description
1	753-04234	Throttle Housing Assembly (includes 2 - 4)
2	791-182405	Switch Assembly
3	791-182690	Throttle Trigger Spring
4	753-04119	Throttle Trigger
5	753-06880	Upper Shaft Housing Assembly
6	753-08042	D-Handle (includes 7)
7	753-06040	D-Handle Bolt
8	753-06944	Split Boom Coupler (includes 9)
9	791-182057	Anti-Rotation Screw
11	753-04508	Lower Shaft Housing Assembly
12	753-04282	Shield Mounting Hardware
13	753-04283	Shield Assembly (includes 14)
14	791-180553	Blade Assembly
15	753-04284	Outer Spool Assembly (includes 16)
16	791-610660	Retainer
17	791-610317B	Spring
18	753-1155	Inner Reel
19	791-153066B	Bump Head Knob Assembly

* Items Not Shown

* 753-1156 Reel & Line Assembly

